



**Aircraft Power
10.5-22 Vdc**

Note: Instrument includes an internal thermal fuse for internal protection. Any fuse 5 Amps or less to protect wiring to the instrument is sufficient.

Notes:

* See the "Installation" section, "Wiring" sub-section of the manual for notes regarding proper grounding.

The Serial input, and Audio Output are reserved for future growth. Leave these unconnected at this time.

The Serial Output should be left unconnected if not used. Do not wire to these inputs. They are reserved for future growth.

**Aux5 and Aux6 apply only to instruments with software versions xxx46, or instrument labeled as 6 Aux Inputs. For all others, these inputs should be unconnected.

**Figure 5a -- Connector A Wiring
for Model 4000/6000/9000**