

## Notes:

**EFIS Display Unit** 

- 1. Mount the module to avoid water, fuel, and extreme heat.
- 2. Turn off power to the module adapter when not in use to avoid discharging the aircraft's battery.
- 3. Wiring is shown to the connector that plugs into the adapter.
- 4. Current Draw is less than 0.2 amp. Power should be supplied to the unit through a breaker of 5 amps or less. It is acceptable to share a breaker with this and other equipment, provided that if the breaker opens, the loss of the equipment powered by that breaker does not cause an issue with the safety of flight.

## Configuring the EFIS

- 1. Using the Set Menu, "General Setup" pages, set "ARINC Module Connected" to "Yes", and set the serial port to the EFIS serial port number which the yellow and brown wire are connected to.
- 2. The ARINC 429 module also provides a serial input and output (expander). This serial port should be used only when all EFIS serial ports are used. Max baud rate is 19.200. Do not use for AHRS or GRT Servos.

## **Post-Installation Checkout**

- 1. The serial port counter will not increment unless data is provided to the ARINC module. Thus, to test the ARINC module, wire it to a device that transmits ARINC 429 data, and verify the serial port counter changes.
- 2. If serial data is provided to the module, turn off the device that is providing ARINC 429 data, turn on the device that is providing serial data, and verify the serial port oounter is changing.
- 3. If the serial and/or ARINC 429 outputs are used, verify the devices using this data are receiving the data.